



UHF (WBU-900) Long Range Reader



PACKING LIST:

- | | |
|----------------------------------|------|
| 1. Host | 1 pc |
| 2. Power Adapter (12V/4A) | 1 pc |
| 3. Power Cord (6 ft) | 1 pc |
| 4. RS232 Connect Cable | 1 pc |
| 5. Test Tag | 1 pc |
| 6. Definition of Connection Pins | 1 pc |
| 7. Packing List | 1 pc |

Please check each component before using.

7380 S. Eastern Avenue, Suite 124-320 • Las Vegas, NV 89123

All items are trademarks of their respective holders.

To have your fax number removed from future specials, please call Removal Services - 800-915-2571 ext. 47540 or fax to 866-975-0404.

UHF (WBU-900) Long Range Reader

DEFINITION OF CONNECTION PINS:

1. Power Pins:

+12V (twin-core): Red (thick)
GND (twin-core): Black (thick)

2. Wiegand Pins:

Wiegand 0: Purple
Wiegand 1: Green
GND: Yellow

3. Trigger Pins: (Reversed for Trigger Mode only)

Trigger: Orange
GND: Yellow

4. RS232 Pins:

232(RX): Blue
232(TX): Grey
GND: Black

5. RS485 Serial Port Pins: (Reversed for RS485 Mode only)

485+: White
485-: Light Green
GND: Yellow

Please make sure all connections are correct before turning on the power.